



63774 Cat Tree Assembly Drawing




1

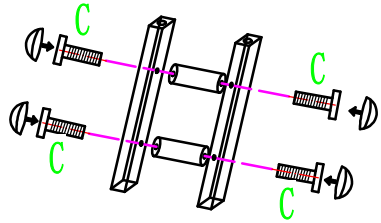


Connect the brown end with the baseboard with big screw

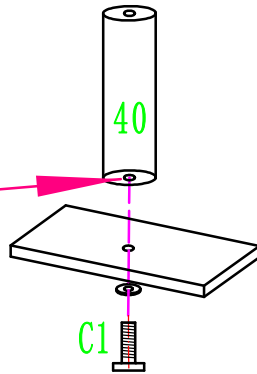


2

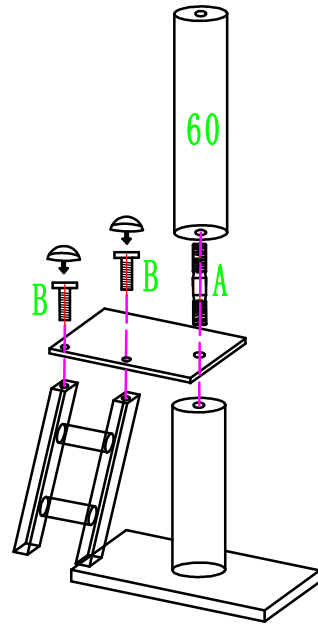

3

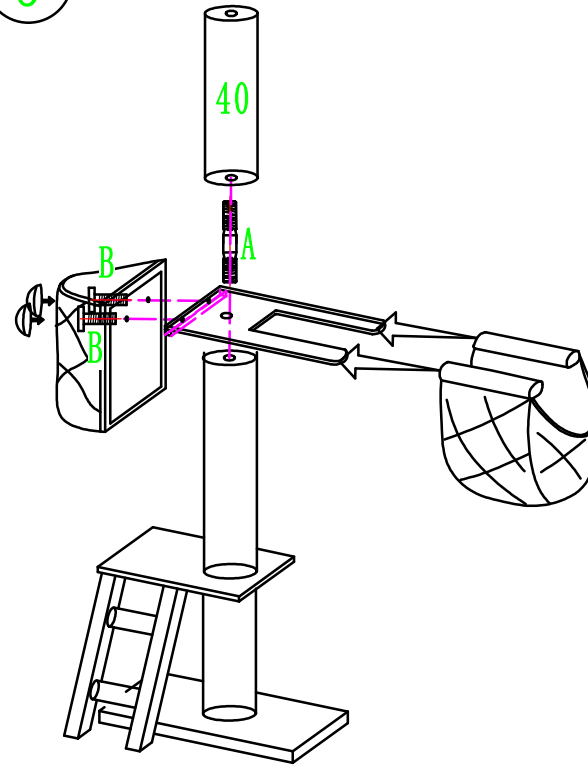

4

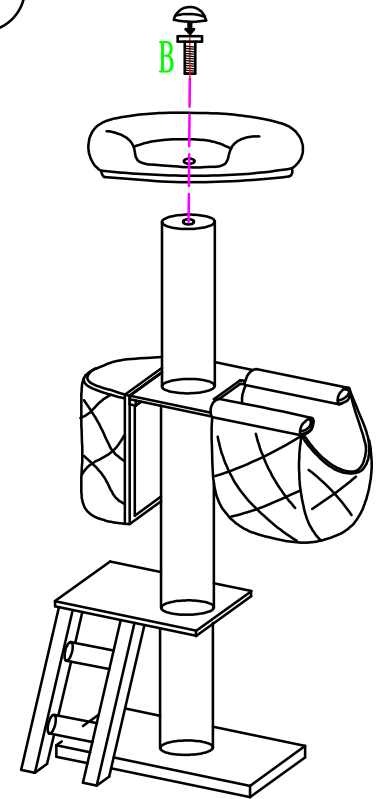

- 2X $\varnothing 5 \times 20\text{cm}$
- 2X $\varnothing 15 \times 40\text{cm}$
- 1X $\varnothing 15 \times 60\text{cm}$
- 1X $\varnothing 50\text{cm}$
- 2X

- 1X $60 \times 45\text{cm}$
- 1X $45 \times 45\text{cm}$
- 1X $50 \times 40\text{cm}$

- 1X $60 \times 45\text{cm}$
- 1X $40 \times 30\text{cm}$

- $8 \times 60\text{mm}$
- $10 \times 60\text{mm}$
- 2X $\varnothing 8 \times 80\text{mm}$ (A)
- (5+1) X $\varnothing 8 \times 40\text{mm}$ (B)
- 4X $\varnothing 8 \times 60\text{mm}$ (C)
- 1X $\varnothing 10 \times 60\text{mm}$ (C1)
- 1X
- 9X