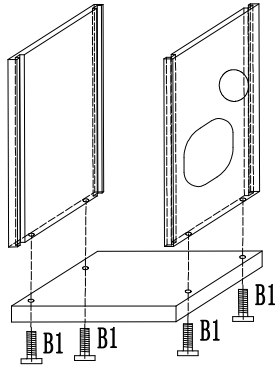


63742-92

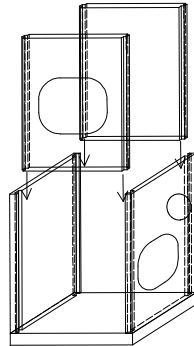
CAT TREE ASSEMBLY



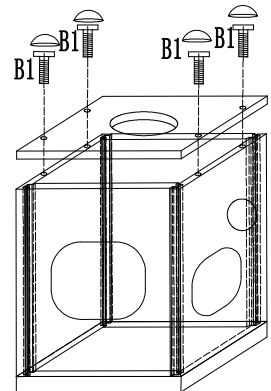
1



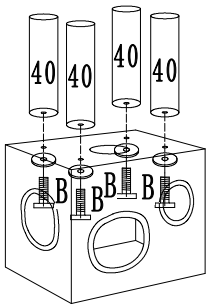
2



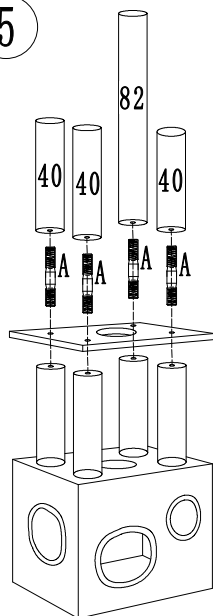
3



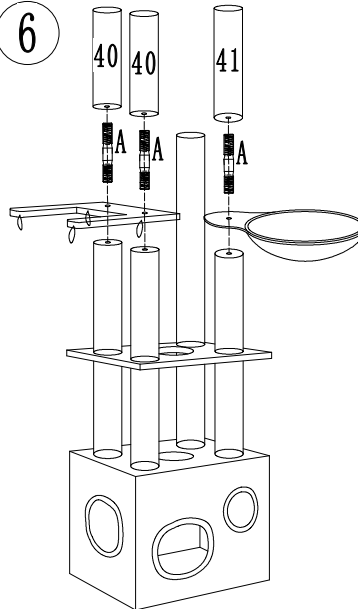
4



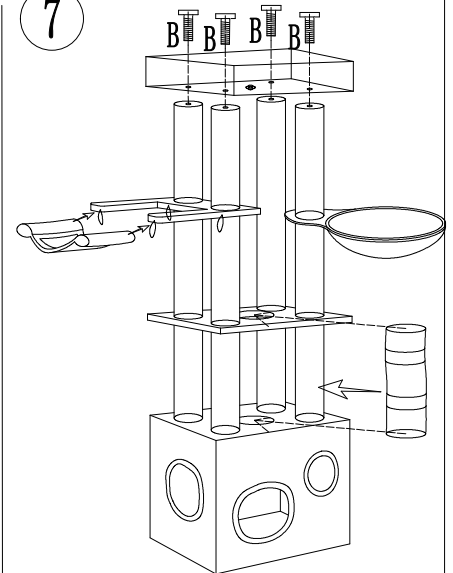
5



6

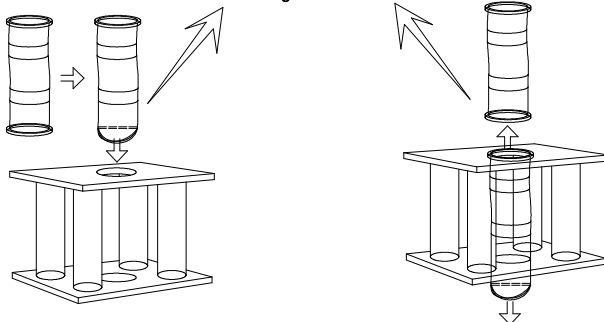


7

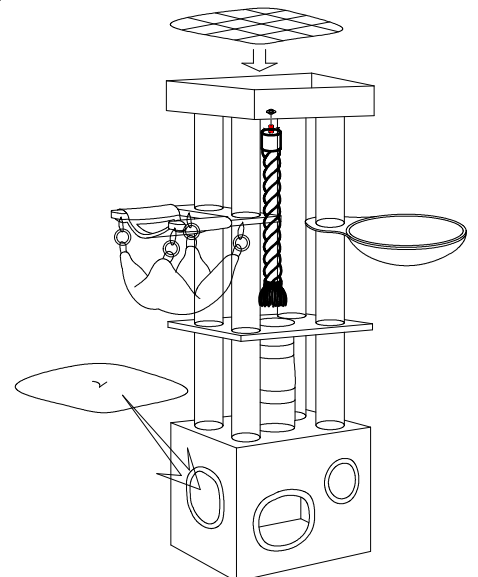





8



Fold the end part of the tunnel into half and pull the tunnel through the 2 holes, and lay flat the end of the tunnel to fix it to the baseboard. Vice versa for disassembling the tunnel.




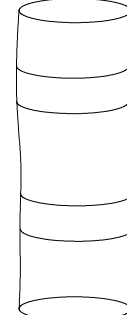
9




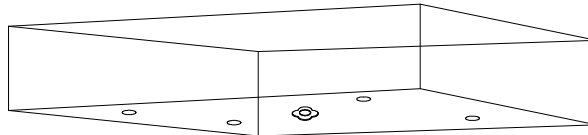
9×  2/2 ϕ 12×40cm
 1×  2/2 ϕ 12×41cm
 1×  ϕ 12×82cm
 2/2


1×  ϕ 5×70cm
 2/2
 1×  50×30cm 2/2

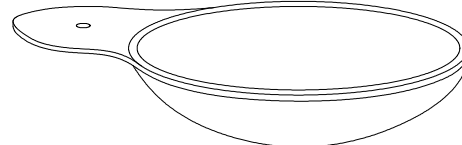
1×  60×50cm
 1/2


1×  ϕ 25×50cm
 2/2

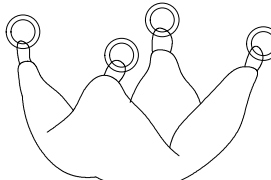
1×  50×50cm 1/2


1×  60×50×10cm
 2/2


1×  55×45cm
 2/2

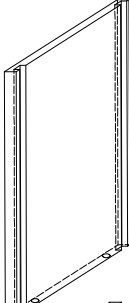
1×  ϕ 45cm
 2/2

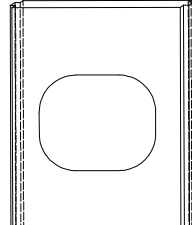
1×  55×45cm 2/2 1×

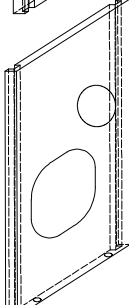
1×  45×45cm
 2/2

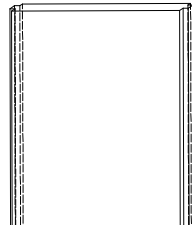
1×  60×50cm
 1/2

1×  60×50cm 1/2

1×  60×47cm 1/2


1×  47×47cm 1/2


1×  60×47cm 1/2

1×  47×47cm 1/2


1×  8×60mm

4× 

(8+1)×  ϕ 8×40mm (B) 1/2

(8)×  ϕ 8×35mm (B1) 1/2

4× 

(7+1)×  ϕ 8×80mm (A)